

STARTING PISTOL CONTENTS

1. One electronic pistol.
2. One communication cable that can be connected to amplifiers.
3. One screwdriver.
4. One padded storage case.

PRODUCT FUNCTIONS

SOUND: Starting pistol, siren, whistle.

LIGHT: Flash that goes off when the trigger is pulled so that timekeepers can start their devices accordingly.

PRODUCT FEATURES

1. 3 in 1 Function:
 - Starting Pistol for Track and Field.
 - Whistle for team sports.
 - Siren for swimming.
2. Can be connected to a race clock (not included) for accurate recording of times.
3. Padded storage case that helps protect the starting pistol when transporting and not in use.
4. Uses 3 x 1.5V AA Alkaline Batteries (not included). This is approximately 2,000 uses of the electronic starting pistol.



WARNING:
To prevent fire or electronic shock, do not expose this unit to rain or moisture.

2-555

STEPS FOR SAFE OPERATION

1. Load 3 x 1.5V AA Alkaline batteries in the battery chamber. See *image 1 and 2*.
2. Connect the AUX output (pistol) to AUX port of a PA system with the communication cable. See *image 3*.
3. Switch to sound mode (icon). The power light will turn on. See *image 4*.
4. Select sound choice (starting pistol, whistle or siren) See *image 5*.
5. If the flash light is needed for a timekeeper, slide the lightning bolt to sound and light mode. When 'CHARGED' lights up, the pistol is ready for use (both sound and light functions).
6. False start – pull the trigger after the race has started for a double sound effect. You must wait until 'CHARGED' lights up before using again.
7. To connect the starting pistol to a timing device, select the AUX output port of the pistol and AUX port of the timing device with a stereo cable. See *Image 6*.

